


IOM 6-12-2016 MODEL 12T

GAGE VALVE

MODEL	12T	PARTS LIST	
-------	-----	------------	--

WEIGHT: 3.3 lbs (1.5 kg) per set

ITEM	DESCRIPTION	MATERIAL—Standard	MATERIAL—Optional
1	Screw	Stainless Steel	n/a
2	Washer	Stainless Steel	n/a
3	Hand Wheel	Painted Aluminum, Yellow	Blue for SS
4	Packing Nut	Steel	Stainless Steel
5	Packing	TFE	Grafoil™ when required
6	Stem Washer	T304 SS	T316 SS
7	Stem	T304 SS	T316 SS
8	Stuffingbox Nut	Carbon Steel	Stainless Steel
9	Washer	Carbon Steel	Stainless Steel
10	O-Ring, 2-208	Viton™	Various
. 11	Body	Cast Steel (WCB)	T316 SS (CF8M)
12	Pipe Plug, 1/4" NPT	Carbon Steel	T316 SS
13	Ball, 3/8"	T304 SS	T316 SS
14	Snap Ring	CRA per NACE MR0175	n/a

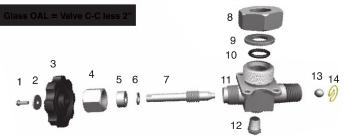

MODEL 12T INSTALLATION


1. Mount valves to tank; be sure to mount upper valve 3. Insert glass deeply into upper valve at top & lower valve at bottom.



2. Transfer the nut, washer and seal from the valve to the end of the glass tube as shown. If using an Inferno Model TE gage instead of a bare glass tube then transfer these three items to the tubular end fittings of the gage.

WARNING: If the nut, washer and seal are left as sembled on thevalve and if the end of the glass i stabbed t hrought he nut and washeand int o the valveit is possible for the sealto sit off certer and be sheared. Avoid damage to O-ring seal by first transferring the schree items to the glass tube (or the end fittingswher using a Model TE).

at an angle as shown. Insert until bottom of glass clears the lower valve and can swing into place. For short C-C distances (under 12") it may be necessary to angle the uppervalve body slightly (less than 1/8 turn) in the vessel coupling.







115 Ricou Street • Shreveport, LA 71107 • Phone (318) 221-8454 • www.nfernomfg.com

© 2016 INFERNO Manufacturing Corporation. All rights reserved. — __ MODEL 12T GAGE VALVE

PRESSURE/TEMPERATURE RANGES MAXIMUM WORKING PRESSURE, PSI

	-300°F	-50°F	-20°F	100°F	200°F	300°F	400°F	500°F
	-184°C	-46°C	-29°C	38°C	93°C	149°C	204°C	260°C
Cast Steel (WCC)			600	600	600	600	600	600
Cast SS (T316)	600	600	600	600	600	600	600	600
		WA	RNING: GLASS	TUBING RATING	S LIMITED BY	WALL THICKNE	SS AND OVERA	LL LENGTH

STANDARD FEATURES

- Straight Pattern
- Rigid Vessel Connection
- Integral Seat
- 5/8" Diameter Glass Corrosion resistant SS trim
- "UPPER" and "LOWER" markings
- help insure correct installation materials
 TFE Stem Packing standard—
- low friction turning Conforms to NACE MR-01-75



Improved Sealing on Glass with standard size 2-208 O-ring-

- Lower torque requirement Wide choice of elastomers (Viton™ is standard)

Safety ball check provides automatic shut-off in case of glass breakage

RATING

Pressure rating of glass will always limit the rating of the valve. Do not operate this valve at pressures higher than the rating of the glass.

BALL CHECKS

This valve contains a safety ball check which is designed to automatically close in case of glass or seal failure. Pressure acts on the ball and forces it against the upstream side of the seat. It takes approximately 6" head pressure (water) to move the ball into check position. Lower head pressure is not enough to check the ball. Also a low volume leak will not provide adequate force to move the ball closed. The safety ball is designed to prevent a large leak such as might occur when a glass blows out under pressure. It is not designed to completely contain a leak. Corrosion or trash between the ball and the seat will interfere with seating to some degree. However ball checks are a good safety device. In high pressure operation they can greatly limit the explosive force of a glass failure



Ball denied seating by stem in closed or "cracked" position

STEAM WARNING

Because of rapid corrosion of tubular glass by hot water, we recommend reflex glass or see-thru glass with mica protection in steam service over 50 WSP or 300°F.

GLASS CLEANING

With valve stem(s) in full open position and drain plug(s) removed a cleaning brush may be inserted through valve body and into glass.

NUISANCE CHECKING

Balls will check when a sight glass is "blown down" using a drain valve attached to the bottom of the lower valve. When this happens both gage valves must be closed and then slowly reopened until the fluid has a chance to equalize between the vessel and the glass. After a liquid level is re-established in the sight glass the valves should be opened all the way. This withdraws the "pusher" extension of the valve stem from the ball cavity. With the valves opened in this way the ball is set up again to close automatically in case of a pressure differential. WARNING: The valves should be pened 2 ull turns minimum to enable automatic safet closing. For this reasonit is bestto operate the valves FULL OPEN as a standard practice. Tway the ball checks a alwaysenabled anthe safetyeatures maintained





Guard Rod Length = Valve C-C + 1/2" length



115 Ricou Street • Shreveport, LA 71107 • Phone (318) 221-8454 • www.nfernomfg.com